



 
CITROËN C3 (automatic)

Vehicle instruction manual: in the glove compartment

Fuel: Petrol **E10**/EURO95

Tyre pressure: see sticker on the pillar of the driver's door


Adjust side mirrors

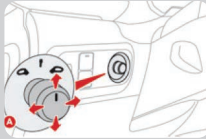

The controls are located on the dashboard, left of the steering wheel:
A. Select left or right sidemirror. You can now adjust the mirror in all directions. Set the arrow back in the middle after adjusting.

Automatic transmission

 To start the engine, press the brake pedal. Keep pressing the brake pedal and change the gear back and left from P (Park) to R (Reverse). Another back and left to change to N (Neutral) and then again back for D (Drive). The actual gear status is displayed on the dashboard.

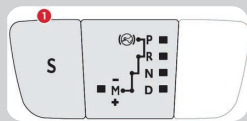

- S (1):** Sport: dynamic driving
- R:** reverse (drive backward)
- N:** neutral
- D:** drive forward
- M+/-:** change the gears manually:
 - To shift the gear up, move to +
 - To shift the gear down, move to -

To stop the engine, press the break pedal and move the gear to P. You can now switch of the ignition.

 
Handbrake



To release the handbrake pull the lever up slightly and push the button at the end. You can then lower the handbrake lever.

If the handbrake is engaged whilst riding, a red warning sign lights up on the dashboard. Release the handbrake immediately!

Steering lock

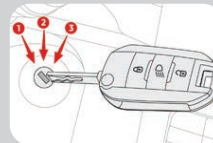

To release the lock turn the ignition key and then the steering wheel.

Air conditioning/Heating



Tap the button on the bottom left of the touch screen to adjust air conditioning and heating.

Adjust the settings on the screen:

- adjust air flow
- set temperature
- air distribution (front window, fleet, ...)
- turn air conditioning on or off
- outside air intake or air circulation (in tunnels, etc.)

 


Front window defroster – button below the touch screen



Rear window defroster – button below the touch screen

Speed limiter/ Cruise control

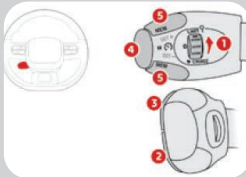


Use the controls on the steering wheel's left side:

1. Select speed limiter/cruise control mode (turn dial up-/downwards)
2. Reduce set speed
3. Increase set speed
4. Turn speed limiter/cruise control on or off
5. Speed limiter/cruise control active/paused

The speed limiter/cruise control are displayed on the dashboard. See car manual for detailed instructions.

 
Headlights/Fog lights

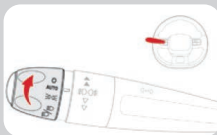

Headlights: rotate the dial at the end of the lever left of the steering wheel to select the correct setting:

- Automatic
- Parking lights only
- Headlights

 Pull the lever towards you (in headlights setting) to operate the high beams.

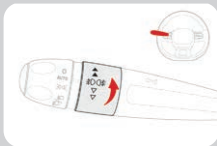


Fog lights:

Front: rotate the dial one click forward/upward to turn on the front fog lights. A control light appears on the dashboard

Rear: rotate the dial forward two clicks to switch on the rear fog lights. A second control light appears on the dashboard.

 Window wipers

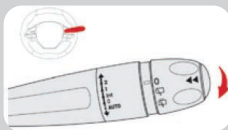

Push the lever right of the steering wheel upward, to select either of the following:

- 0 = off
- 1 = intermittent
- 1 = normal speed (moderate rain)
- 2 = high speed (heavy rain)
- Auto** = turns on automatically when it rains
- Push the lever down** = single wipe

Pull the lever toward you to spray and wipe.

Rear wipers: Rotate the dial forward one click to operate the rear wipers (intermittent). Rotate the dial another click forward to spray and wipe.

Park assist



This vehicle features a park assist system in the rear.

When in reverse gear, a buzzer will beep faster as you get closer to an obstacle. Visual cues will be displayed on the screen near the central console.

Be sure to brake in time!

Fuel cap *(always use Petrol E10/EURO95)*

On the driver's side at the back. You can place the cap in the dedicated holder on the fuel lid while fueling



GPS (touchscreen)



 
To start the GPS function tap the middle button on the left of the screen. Tap MENU to enter a destination.

12 volt socket



There is a socket at the bottom half of the dashboard on the left.

Spare wheel

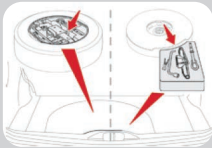

The spare wheel is stored under the boot floor, along with a jack and wheel wrench. See instruction manual for further instructions.

Open the boot



Normal operation. To open, pull the handle at the base of the hatch.

SOS-button



Please refrain from using the SOS button or the assistance button on the dashboard. In case of a breakdown or accident please contact cambio with the yellow button on the on board computer.